

# DM42 User Manual

SwissMicros GmbH

Version 3.23, 2021-09-19

# Table of Contents

1. About this User Manual .....	1
2. General Information .....	1
2.1. Specifications .....	1
2.2. CPU Speed .....	2
2.3. IR Printing .....	2
2.4. Internal FAT disk .....	2
2.5. Battery .....	3
3. Calculator Extensions .....	4
3.1. Virtual variables .....	4
3.1.1. RefLCD in more detail .....	5
3.1.2. Accessing virtual variables .....	6
3.2. F-Buttons .....	7
3.3. Flag State Indicators .....	8
3.4. PIXEL and AGRAPH .....	8
3.5. Alpha Input Mode .....	8
3.6. Printing to File .....	9
3.7. LCD Screenshots .....	10
3.8. OFF Images .....	10
3.9. RTC correction .....	11
4. Program Decoder/Encoder .....	11
5. DM42 Menus .....	11
5.1. Main Setup menu .....	12
5.2. File menu .....	12
5.2.1. Load Program > .....	12
5.2.2. Save Program > .....	12
5.2.3. Activate USB Disk > .....	12
5.2.4. Show Disk Info > .....	13
5.3. Calculator State menu .....	13
5.3.1. Load State .....	13
5.3.2. Save State .....	13
5.3.3. Load Clean State .....	14
5.4. Printing menu .....	14
5.4.1. Graphics Print .....	14
5.4.2. Text Print .....	14
5.4.3. Graphics in Text .....	14
5.4.4. Don't print to IR .....	14
5.4.5. Double Newline .....	14
5.5. Settings menu .....	14

5.5.1. Set Time > .....	14
5.5.2. Set Date > .....	14
5.5.3. Status Bar > .....	15
5.5.4. Stack Font Sizes > .....	15
5.5.5. Beep Mute .....	15
5.5.6. Slow Auto-repeat .....	16
5.5.7. Stack Layout .....	16
5.5.8. Dynamic Stack Extension .....	16
5.6. System menu .....	16
5.6.1. Flash firmware from FAT .....	16
5.6.2. Bootloader .....	16
5.6.3. Program Info .....	16
5.6.4. Reset to DMCP menu .....	17
5.6.5. Format FAT Disk > .....	17
5.6.6. FAT Disk Media Test > .....	17
5.6.7. Power OFF mode .....	17
5.6.8. Self Test .....	17
6. Firmware Update .....	18
6.1. Changes since v3.7 .....	19
6.2. Quick Update Guide (FAT disk update) .....	20
6.3. DMCP and PGM Update Guide .....	20
6.4. Program Loading/Update .....	21
6.5. DMCP Update Guide .....	21
6.6. Bootloader mode activation .....	22
6.7. FW Update Using dm_tool .....	22
6.7.1. Prerequisites for Windows .....	22
6.7.2. Prerequisites for Linux .....	22
6.7.3. Launching dm_tool .....	23
6.8. FW Update Using dfu-util .....	23
6.9. QSPI flashing .....	26
6.9.1. General information .....	26
6.9.2. Flashing QSPI from FAT disk .....	26
6.9.3. Flashing QSPI using dm_tool (obsolete) .....	27
6.9.4. Flashing QSPI using dfu-util .....	27
6.10. DMCP System Menu .....	28
6.10.1. Program Info .....	28
6.10.2. Run Program .....	28
6.10.3. Load Program .....	28
6.10.4. Load QSPI from FAT .....	28
6.10.5. Settings > .....	28
6.10.6. Activate USB Disk .....	29

6.10.7. Enter System Menu .....	29
6.10.8. About .....	29
6.11. QSPI Load menu .....	29
6.11.1. Bootloader .....	29
6.11.2. Load QSPI from FAT .....	30
6.11.3. Activate USB Disk > .....	30
6.11.4. Format FAT Disk > .....	30
6.11.5. FAT Disk Media Test > .....	30
6.11.6. Show Disk Info > .....	30

# 1. About this User Manual

This user manual refers to special features of DM42. PDF version of this manual is available at [https://technical.swissmicros.com/dm42/doc/dm42\\_user\\_manual.pdf](https://technical.swissmicros.com/dm42/doc/dm42_user_manual.pdf).

Look at the following documentation for description of basic calculator functionality:

- [HP-42S Owner's Manual](#)
- [HP-42S Programming Examples and Techniques](#)
- [Free42 Manual](#)
- [Free42 Extensions](#)

SwissMicros calculators forum for discussion and help:

- <https://forum.swissmicros.com/>

*Many thanks to Godwin also known as grsbanks in [SwissMicros Forum](#) for extensive contribution to DM42 project. Especially for his fearless testing, proofreading of this manual, fruitful ideas, forum moderation and top-notch release posts.*

## 2. General Information

### 2.1. Specifications

Specification	Details
Construction	Case made from stainless steel, matte black Physical Vapour Deposition (PVD) coated and laser engraved
Software	Open Source Free42 running on SwissMicros Operating System (DMCP)
Floating point standard	IEEE 754-2008, 128-bit floating point precision implementation with 128-bit transcendental function support
ISO conformity	ISO/IEC TR 24732
Processor	Ultra low power ARM Cortex-M4F 80 MHz
Flash memory	32 MBit external flash
Display type	Monochromatic ultra high contrast (14:1) transfective memory LCD display
Display resolution	400 × 240 pixels
Display active area	58.8 mm × 35.28 mm

Specification	Details
Display dot pitch	147 $\mu\text{m}$ $\times$ 147 $\mu\text{m}$
Connectivity (PC)	USB-Micro-B port, connects as USB mass storage device
Connectivity (IR)	IR Transmitter compatible with the original HP-82240A/B printer
Battery type	1 $\times$ CR2032 lithium coin cell, 3.0 volts <sup>[1]</sup>
Battery life	Up to 3 years
Sound	4 kHz resonance frequency Piezo-electric buzzer
Size	77 mm $\times$ 144 mm $\times$ 12 mm
Weight	180 g
Warranty	5 years



[1] The battery isn't rechargeable. See [Battery](#) chapter below for battery replacement and further info.

## 2.2. CPU Speed

CPU speed is 24MHz when running on battery (due to limited battery current) and increases to 80MHz when the USB cable is connected.

## 2.3. IR Printing

Calculator contains IR output and can print on HP 82240B infrared printer.

## 2.4. Internal FAT disk

The calculator has 6MB of internal flash storage formatted as a FAT filesystem that is used for loading/saving programs and for backing up calculator state. It is accessible as USB disk when activated via the menu 'File > Activate USB Disk >'.  
 Internal flash has limited amount of write cycles. While the lifetime with ordinary usage could be dozens of years, an excessive number of writes will wear the flash memory much quicker.



In the worst case scenario, you would have to replace the flash chip, which is worth less than \$1. If needed, SwissMicros will replace the chip at no cost, but shipping costs must be covered by the customer.

The datasheet mentions a minimum of 100,000 write cycles, which sounds like a lot, but any change in the filesystem means overwriting at least part of the file allocation table, which is stored in a static location.

Calculator comes with pre-filled FAT disk contents. In case the contents of the FAT area is lost it

could be always downloaded from the SwissMicros [DM42 FAT files](#) page. There are the contents of individual directories accessible separately or the whole contents of FAT disk can be downloaded as single zip file [DM42\\_FAT.zip](#).

There are several directories with special names on the FAT disk:

#### **HELP**

Contains help file(s) for built-in DM42 help that can be activated from main system soft menu by pressing [ F1 ] key (leftmost in top row of keys).

#### **OFFIMG**

Bitmap files from this directory are displayed when the calculator is turned off. See [OFF Images](#) chapter for more details.

#### **PRINTS**

Printing to a file creates output files (both text and images) in this directory.

#### **PROGRAMS**

Raw files with programs are loaded/saved from/to this directory.

#### **SCREENS**

Screenshots of calculator LCD are saved into this directory. See [LCD Screenshots](#) for more details.

#### **STATE**

Calculator state files with extension `.s42` are stored in this directory. See chapters [Load State](#) or [Save State](#) how the load or save calculator state.

## **2.5. Battery**

The calculator uses a single CR-2032 Lithium 3V battery. It is not rechargeable, therefore it has to be replaced when depleted.



Please remember it is always wise to make calculator data backup before battery replacement. Use USB power during data backup if possible.

You can power calculator from USB during battery replacement.

To change the battery:

- remove the 2 screws on the upper rear of the case,
- remove the back,
- (optional) connect USB cable to prevent power loss
- extract the old battery by gently pushing it out of the holder from the bottom towards the top of the case;
- then insert the new battery with plus (+) side facing up (away from the board),

- slide all the way down to the bottom of the holder,
- then replace the back and screw-in the 2 original screws.

## 3. Calculator Extensions

### 3.1. Virtual variables

Managing some of the new features specific to the DM42 is something that spurred a lot of discussion. Initially we wanted to re-purpose some of the so-called "reserved" flags of the HP-42S but it soon became apparent that others had already done so in various patches for Free42, and we wanted to avoid trampling on anybody's toes with our own patches for Free42.

The next idea was to extend the number of flags available beyond 100 but obviously only have them accessible via indirect addressing as there was no question of patching Free42 to accept 3 digits in the various flag instructions. But then, how do we make integer values (and one real value) available to programs without assigning a whole block of flags that are going to be awkward to read?

After that we thought of using extended register numbers. They would either have to be assigned ridiculously high index numbers in order to avoid conflict if someone decided to go for a register array SIZE of 2000, or they would have to be assigned negative index numbers. We couldn't use negative indexes because the HP-42S and Free42 just take the absolute value of the index and use that to access the correct register and some programs might rely on that.

We settled on the concept of "Virtual Variables". These are variables that do not (and cannot, for that matter) exist in the DM42's variable table. Because of this, they are not listed in the variable menu when you press RCL or STO but there is a way to make them easy-ish to access, just read on...

There are six such virtual variables:

#### "DevID"

Device ID (read-only) — RCL "DevID" returns the type of DM42 you're using. There are currently two hardware models only identified by value 0 (zero) is returned by the DM42 units that we have. Other types of unit that may be produced in future will have different DevID values.

#### "GrMod"

Graphics Mode (read-write) — RCL "GrMod" retrieves the current graphics mode and STO "GrMod" sets the graphics mode to the number present in the X register. Graphics modes currently supported are:

- 0 = standard HP-42S resolution 131x16
- 1 = reserved for future use and maps to 0 on the DM42
- 2 = DM42 full resolution 200x120
- 3 = DM42 full resolution 400x240

#### "ResX" and "ResY"



X- and Y-resolution (read-only) — RCL "ResX" or RCL "ResY" recalls the current X-resolution or Y-resolution respectively into the X stack register. The values that you will get are 131, 200 or 400 for RCL "ResX" and 16, 120 or 240 for RCL "ResY" depending on the current graphics mode (0, 2 or 3).

### "Vbat"

Battery voltage (read-only) — If you're running off battery power then this will give you the voltage read at that precise moment in time. If you're running on USB power then this will give you the last battery voltage that was recorded before connecting the USB cable. Note that the value retrieved here can and almost always will be different to the voltage displayed in the status bar. The latter is cached and almost always retrieved when the DM42 is idle. The voltage read from "Vbat" is the voltage read while you are using the keyboard and/or running a program. This can be useful for pausing lengthy processing if the battery voltage drops below a threshold and allowing it to recover before resuming.

### "RefLCD"

The purpose of programs can vary significantly. There are programs like a stopwatch or games, where quick refreshing of the LCD is required. On the other end of the spectrum are pure computational programs, where no LCD output is required throughout program execution and where it is more beneficial to utilize all the CPU time for computation rather than wasting it on unnecessary LCD updates. The "RefLCD" virtual variable was introduced specifically to address those different requirements. It is possible to disable LCD refreshing altogether or to enable the periodic refresh of individual portions of the LCD.

#### 3.1.1. RefLCD in more detail

It is possible to disable LCD refreshing altogether or to enable the periodic refresh of individual portions of the LCD. The value that you store in this variable is in fact a bitmask as per the table below. Items whose corresponding bit is cleared are not refreshed whereas those whose bit is set are refreshed with 200ms timeout after the LCD contents changes.

Bit	Value	Zone
0	1	Main area (stack/graphics)
1	2	Goose
2	4	Annunciators

In order to prevent any part of the LCD from refreshing and thus maximize performance, store the value 0 (zero) in "RefLCD". Storing 1 in the variable means that the main area will be updated with 200ms timeout (stack or the graphics display if that is what is active). 2 will allow the goose to fly and 4 will allow the annunciators (including the flag tiles) to be updated. To have more than one zone refreshed during program execution, store the sum of the bit value(s) in "RefLCD" as follows:

Value	Binary	Zone(s)
0	000	None (no refreshing occurs)

Val ue	Bin ary	Zone(s)
1	001	Main area
2	010	Goose
3	011	Main area and goose
4	100	Annunciators
5	101	Annunciators and main area
6	110	Annunciators and goose
7	111	Annunciators, goose and main area (everything)

You can, however, still refresh zones on an ad hoc basis even when they don't normally refresh by storing the negative value of the bitmask value in "RefLCD". For example, to update the annunciators programatically "now", store -4 to "RefLCD".

One exception to this is the message area in which VIEW and AVIEW show their results. This is never disabled and is repainted with 200ms delay(if needed) even if zero is stored in "RefLCD". If the redraw response isn't fast enough (e.g. for a stopwatch application, see below) then you can have the message area refreshed by program by storing the value -8 in "RefLCD". This program shows an example of how to use it:

```

00 { 49-Byte Prgm }
01 LBL "STOPW";
02 TIME
03 →HR
04 STO 02
05 "RefLCD";
06 ASTO 03
07 CLX
08 STO IND 03 @ Disable refreshing
09 FIX 02
10 LBL 00
11 TIME
12 →HR
13 RCL- 02
14 3600
15 ×
16 VIEW ST X
17 -8
18 STO IND 03 @ refresh the message area now
19 GTO 00

```

### 3.1.2. Accessing virtual variables

Attempting to STO a value in a read-only virtual variable has no effect, so it is not possible to create these variables in the variables table within Free42. Because of this it is a bit awkward to RCL and

STO them directly. We recommend adding a reference to the virtual variables that you will need in your program in order to access the variables indirectly later on. Something like this:

```
&quot;GrMod&quot;  
ASTO 10  
&quot;ResX&quot;  
ASTO 11  
&quot;ResY&quot;  
ASTO 12
```

Where needed you can then simply address the virtual variables this way:

```
3  
STO IND 10  
&quot;Pixels on &quot;  
|&quot;screen: &quot;  
RCL IND 11  
RCLx IND 12  
ARCL ST X  
AVIEW  
STOP
```

## 3.2. F-Buttons

The top row of keyboard consists of six unprinted buttons referenced as F-Buttons (F1-F6) or Soft-Menu Buttons. When no calculator menu is in action those buttons have following functions:

### F1

Displays the Help. Note that the </HELP/index.htm> file has to be present. The latest version can be downloaded from the [DM42 help page](#).

### F2

Toggle this system soft menu visibility.

### F3

(not assigned)

### F4

Increase buzzer volume

### SHIFT-F4

Decrease buzzer volume

### F5

Toggle stack alignment (Left, Right, Right Underlined)

## SHIFT-F5

Toggle between sans and HP font

## F6


Increase font size

## SHIFT-F6

Decrease font size

## 3.3. Flag State Indicators

There is special 'Flags area' which indicates state of calculator flags 0-10.

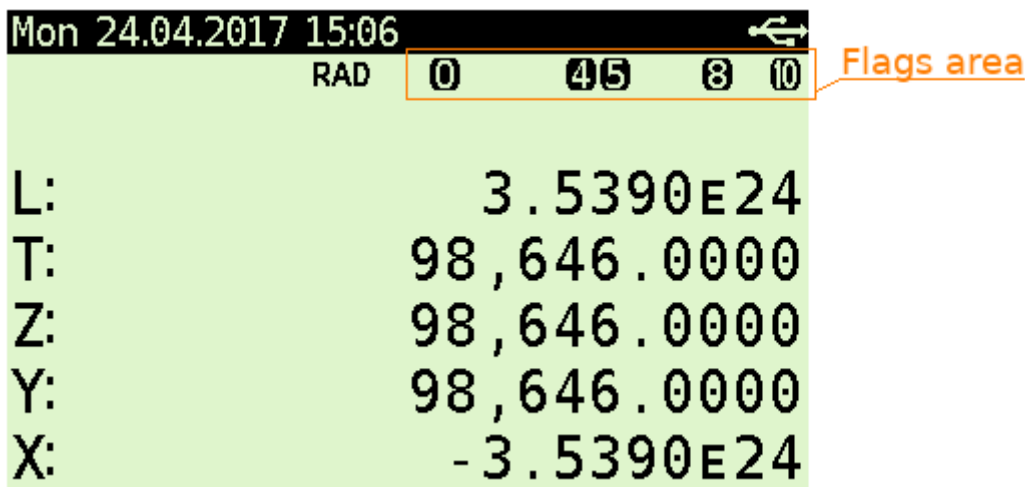

## 3.4. PIXEL and AGRAPH

PIXEL and AGRAPH are not limited to the original HP-42S's resolution of 131x16 pixels. The compatibility with negative values to display lines and with complex numbers and matrices is conserved. You can now use horizontal values of  $1 \leq X \leq 200$  and vertical values of  $1 \leq Y \leq 120$  in 200x120 mode, or  $1 \leq X \leq 400$  and  $1 \leq Y \leq 240$  in 400x240 mode. Switching between 131x16, 200x120 and 400x240 modes is achieved using the [GrMod virtual variable](#) and current graphics resolution could be probed by [ResX](#) and [ResY](#).

## 3.5. Alpha Input Mode

Upon entering Alpha input mode you will see a new annunciator on the screen:

- "[ ]" denotes original HP-42S input mode. This is the mode that Alpha input starts with when entered for the first time.
- "[a]" denotes lower case DM42 input mode.
- "[A]" denotes upper case DM42 input mode.

[SHIFT] followed by [▲] and [▼] allow you to cycle through the modes.

The DM42 remembers which mode you were in last time alpha input was active and upon entering

alpha input modes switches immediately to that mode.

### Original HP-42S mode

- Function keys work as expected for standard characters.
- ASTO (STO) and ARCL (RCL) work as expected.
- "%", "pi" and "E" work as expected.
- **[ SHIFT ] [ SHOW ]** works as expected.
- Local labels LBL 01, LBL A and LBL a work as expected.
- Global labels LBL "ABC", LBL "123" and LBL "A123" work as expected.
- Un-shifted [R/S] works as expected and [SHIFT] [R/S] enters/leaves Prgm mode as expected.

### Lower and upper case DM42 modes

- The function keys still allow input in HP-42S mode.
- All alpha keys A-Z give the expected characters.
- **[ SHIFT ] [ A ]** to **[ SHIFT ] [ O ]** give the same characters.
- **[ SHIFT ] [ 0 ]** (zero) to **[ SHIFT ] [ 9 ]** give the digits 0-9 instead of the alpha characters.
- Shifted **[ ÷ ]**, **[ × ]**, **[ - ]** and **[ + ]** give '÷', '×', '-' and '+' instead of the alpha characters.
- Shifted **[ R/S ]** gives '?' instead of entering/leaving Prgm mode.
- ASTO, ARCL, '%', 'pi' and 'E' (exponent) are not available. Switch to standard HP-42S mode to get them.
- **[ SHIFT ] [ SHOW ]** is not available. Use standard HP-42S mode.
- Two-digit local labels LBL 01 are not available. Use standard HP-42S mode.
- Local labels LBL A and LBL a and global labels LBL "ABC", LBL "123" and LBL "A123" work as expected.
- Un-shifted **[ R/S ]** still behaves as usual allowing program execution to resume after inputting alpha data to a program.
- Function arguments (eg. STO\* "h") work as expected

### SST/BST in alpha input mode

Press and hold the **[ SHIFT ]** key while pressing **[ ▲ ]** or **[ ▼ ]** in order to execute BST or SST respectively when in alpha input mode. As on the original HP-42S, BST will start auto-repeating after a while and SST will NULL after a couple of seconds if you press and hold **[ ▲ ]** or **[ ▼ ]** respectively.

## 3.6. Printing to File

Since DM42 3.10 in addition to default IR printing user can choose printing to file.

This functionality can be activated in [Printing menu](#).

Two output formats are supported:

## Graphics Print

Creates bitmap (`.bmp`) file with printed data in graphics.

## Text Print

Creates text (`.txt`) file with printed data in UTF-8.

The output file `/PRINTS/<time-stamp>.txt` for text output and `/PRINTS/<times-tamp>.bmp` for graphics output is created just after the 'Text Print' or 'Graphics Print' (respectively) is activated in menu.

Disabling one of those options flushes appropriate buffer and finishes the file. Next activation of previously deactivated 'Text Print' or 'Graphics Print' creates new file with current time-stamp.



Printing buffers are allocated from available calculator memory just after the 'Text Print' or 'Graphics Print' is selected in menu. Error is displayed if not enough memory is available also no file is created and selected option isn't activated.

There are two options for tweaking the *print to file* functionality:

### Don't print to IR

(affects both 'Text Print' and 'Graphics Print')

Disables printing to IR and printing delays.

### Graphics in Text

(affects 'Text Print' only)

If enabled graphics prints appear as block graphics in text file using Unicode "Block Elements".

Note that you need reasonably equipped font to display the graphics print correctly (which isn't the default case for Windows users).

## 3.7. LCD Screenshots

Hold [ **SHIFT** ] and press [ **DISP** ] to get a screenshot.

You will find a `.bmp` file named according to the current time and date in the `/SCREENS` folder of the FAT drive.

## 3.8. OFF Images

The LCD display used in DM42 calculator behaves in similar way as e-ink displays and contents of the LCD is visible for a long time after the calculator is turned OFF.

This feature is used to display images when the calculator is turned OFF.

Single hard-coded OFF image is present in calculator firmware and this image is displayed whenever the calculator is turned OFF and FAT disk doesn't contain any valid custom image or the FAT disk is in error state.

Custom OFF images should be stored in `/OFFIMG/` directory. All valid images are then cyclically displayed one after each calculator OFF in the order how they appear in `/OFFIMG/` directory.

OFF images require specific image format. It has to be `.bmp` file with dimensions 400 x 240 and 1 bit depth.

Examples of OFF images can be found on "[A collection of off-screen images](#)" page.

## 3.9. RTC correction

Note that to apply RTC correction you have to know (measure and calculate) ppm drift of calculator clock first.

Use following steps to apply clock frequency correction.

1. Calculate correction factor C which best matches required ppm correction P

$$C = 2^{20} P / (10^6 + P)$$

resulting value C has to be integer and  $-511 \leq C \leq 512$ .

2. Create file `/rtccalib.cfg` in root directory of calculator FAT disk and write value C there.
3. Once the RTC correction is active the ppm value is written in Setting menu at the end of "Set Time >" line.

It is possible to use approximate expressions between correction factor C and ppm value P (with reasonable precision):

$$C = 1.04858 P$$

$$P = 0.953674 C$$

## 4. Program Decoder/Encoder

Thanks to generous contribution of Godwin (known as grsbanks in [forum](#)) we can use web based program decoder and encoder for Free42 raw files - i.e. those files used for program import/export in DM42.

Thus you can prepare your DM42 program directly on PC and then download it to DM42 and import it there. As well as export programs written directly on DM42 and edit them on PC.

The program decoder/encoder is located at <https://technical.swissmicros.com/dm42/decoder/>. Follow this link and look into **instructions** tab for more details.

## 5. DM42 Menus

Menu navigation:

- Select menu items using [ ▲ ], [ ▼ ] keys.
- Activate current menu item by pressing [ ENTER ] key or by pressing the number key corresponding to particular menu line.

- Return to previous menu level by [ EXIT ] or [ ← ] key.

## 5.1. Main Setup menu

Main 'Setup menu' could be entered by pressing [ SHIFT ]+[ SETUP ].

From there other sub-menus could be entered or about screen displayed

1. [File menu](#)
2. [Calc. State menu](#)
3. [Printing](#)
4. [Settings menu](#)
5. [System menu](#)
6. About > Displays About screen.

## 5.2. File menu

### 5.2.1. Load Program >

Used for loading the `.raw` programs stored in the `/PROGRAMS/` directory of the flash storage.

It should display all `.raw` files from `/PROGRAMS/` directory in alphabetical order.

To load program

- Select the program to load using the [ ▲ ] and [ ▼ ] keys
- [ ENTER ] to load the selected program

Loading info flashes for a second until the program is loaded into calculator memory.

Then the program list is displayed again. You can load next program or leave the menu by [ EXIT ] key.

### 5.2.2. Save Program >

Used for saving one or more program(s) from the calculator memory to a `.raw` file in the `/PROGRAMS/` directory of the flash storage.

- Select the program or programs to save, confirm with [ ENTER ]
- Choose existing filename as target or type new target filename, confirm with [ ENTER ]

### 5.2.3. Activate USB Disk >

Used to copy files from/to a host computer - e.g. backup/restore the calculator state files from `/STATE/` directory or read/write programs in RAW format into `/PROGRAMS/` directory.

- Connect the calculator to a computer using a USB cable



- The DM42's flash disk should be visible on the computer
- Read/write files
- 'Eject device' on the host machine.
- Calculator should end USB disk mode automatically if correctly ejected by OS. You can end USB disk mode by pressing [ **EXIT** ] key on the calculator but be sure all data are flushed to disk first.



The last two points 'Eject device' and 'Press [ **EXIT** ] key on calculator' (if it doesn't end automatically) are important to avoid unsaved data and possible FAT disk corruption!

#### 5.2.4. Show Disk Info >

Displays disk status and disk block info.

### 5.3. Calculator State menu

The calculator reads last used state file after a hardware RESET (i.e. after pressing the [RESET] on the back of the calculator).

Reading of last stored calculator state file can be bypassed (eg. when the FAT disk is corrupted and the calculator hangs after a reset while reading the state file) by holding the [ - ] key and pressing the [RESET] button on the back of the calculator.

#### 5.3.1. Load State

Displays list of available calculator state files ( *.s42* extension) from */STATE/* directory.

To load calculator state file:

- Select particular file and press [ **ENTER** ] to load the state file.
- Confirmation dialog appears and you have to acknowledge you want to abandon current calculator state.

If confirmed, calculator is restarted and selected calculator state file loaded.

#### 5.3.2. Save State

Used for saving current calculator state to a *.s42* file into the */STATE/* directory of the flash storage.

To save state file: - Select existing filename as target or type new target filename, confirm with [ **ENTER** ] - Confirmation dialog can appear if existing file is about to be overwritten

If confirmed, calculator state is saved and subsequently is the calculator restarted and the calculator state file reloaded.

### 5.3.3. Load Clean State

Restarts the calculator without reading the state file (same as [RESET] + [-]).

## 5.4. Printing menu

For functional details look at [Printing to File](#).

### 5.4.1. Graphics Print

Selecting this menu item enables printing to graphics file.

### 5.4.2. Text Print

Selecting this menu item enables printing to text file.

### 5.4.3. Graphics in Text

Selecting this menu item enables to see graphics in text file.

### 5.4.4. Don't print to IR

Selecting this menu item disables default printing to IR printer.

### 5.4.5. Double Newline

Place one more newline after each printed line. This option applies only for printing to IR printer.

## 5.5. Settings menu

### 5.5.1. Set Time >

Used for setting the time.

- Use the function keys to adjust the time.
- Press **Set** to write the new time to the calculator clock or **[EXIT]** to cancel your changes.

### 5.5.2. Set Date >

Used for setting the date.

- Use the function keys to adjust the date.
- Press **Set** to write the new date to the calculator clock or **[EXIT]** to cancel your changes.
- **Σ+** could be used to change between DMY/MDY formats.

### 5.5.3. Status Bar >

Displays filed selector for what should be displayed in calculator top status bar:

```
Status Bar menu
1. State Filename
2. Day of Week
3. Date
4. Date Separator
5. Month Shortcut
6. Time
7. Power Voltage in Header
```

Fields are always displayed in order how they appear in this menu.

### 5.5.4. Stack Font Sizes >

Enters font size configuration for stack registers:

```
Stack Font Sizes menu
1. Font Size Offset Reg X: 0
2. Font Size Offset Reg Y: 0
3. Font Size Offset Reg Z: 0
4. Font Size Offset Reg T: 0
5. Font Size Offset Reg L: 0
6. Font Size Offset Reg A: 0
```

For each register a font offset in range -5 .. 5 could be specified. Each font offset is relative to current font size set by [ F6 ] / [ SHIFT ]+[ F6 ] keys.

#### **Example:**

Lets expect there are five font sizes 1 to 5 and third font size is selected. If the "Font Size Offset Reg X" is set to 1 and other offsets remain zeroed, then the X register will be displayed in one step larger font then others.

Note that the if the maximal font size is reached the font remains at maximal size. So, setting all font offsets to 5 actually disables any effect of [ F6 ] / [ SHIFT ]+[ F6 ] keys.

### 5.5.5. Beep Mute

Selecting this menu item toggles the 'Beep Mute' flag.

When the 'Beep Mute' flag is active, no sounds are produced by the calculator.

Note that this value is stored in the calculator state file.

### 5.5.6. Slow Auto-repeat

Selecting this menu item toggles the 'Slow Auto-repeat' flag.

When the 'Slow Auto-repeat' flag is active auto-repeat delays are prolonged.

Note that this value is stored in the calculator state file.

### 5.5.7. Stack Layout

Enters stack layout selector where one of following layouts could be selected

Stack Layout menu

1. XYZTL
2. XYZTA
3. XYZT
4. XYL
5. XYA
6. XY

### 5.5.8. Dynamic Stack Extension

Selecting this menu item enables or disables the 'Big Stack' extension of Free42.

## 5.6. System menu

### 5.6.1. Flash firmware from FAT

Starts flashing of new firmware if the firmware file is stored in root directory of FAT disk. This is usually not necessary because calculator automatically detects presence of new firmware file and asks for update after end of USB disk mode.

See [Firmware update](#) chapter for more information about firmware update.

### 5.6.2. Bootloader

Activates bootloader mode for firmware flashing.

You can flash DM42 firmware once is the bootloader mode entered. See [Firmware update](#) chapter for more information about firmware update.

Press the RESET button on the back of the calculator if you activate Bootloader mode accidentally.

### 5.6.3. Program Info

Displays information about currently loaded DM42PGM. This is mainly for diagnostics.

### 5.6.4. Reset to DMCP menu

Reboots calculator back to DMCP system menu.



All unsaved data is lost.

### 5.6.5. Format FAT Disk >

Format the internal FAT disk storage.



All data is erased from disk.

### 5.6.6. FAT Disk Media Test >

Checks whole flash disk FAT area for bad blocks. Disk is formatted starting from first good block after the check.



All data is erased from disk.

### 5.6.7. Power OFF mode

This item is purely for power OFF testing purposes to avoid time consuming switching between firmwares. It is in no way mentioned to be changed by users.

- Mode 0 means no deep sleep for QSPI giving approx. 12uA sleep current.
- Mode 1 corresponds to pre 3.9 DMCP behavior.
- Mode 2 corresponds to DMCP 3.9 and newer versions.
- Mode 3 is the latest update to mode 2 which should fix possible deficiencies of mode 2 by adding further pull-ups.

Defaults:

```
hwid=0 : Mode 1  
hwid=1 : Mode 3
```

Note that the "Power OFF mode" value is preserved during calculator RESET, but is lost when battery is removed.

### 5.6.8. Self Test

Displays production test menu where tests of various parts of calculator could be run from.

Self Test menu

1. KBD Test
2. LCD Test
3. IR Test
4. BEEP Test
5. Diagnostics

## 6. Firmware Update



Please remember it is always wise to make FAT disk backups periodically and especially before any update.



The latest firmware version is available at [https://technical.swissmicros.com/dm42\\_user\\_manual/firmware/](https://technical.swissmicros.com/dm42_user_manual/firmware/)

**If you are looking for quick update instructions you most probably want to follow [Quick Update Guide](#).**

DM42 has two firmware areas. First one is the main flash area which is updated with each firmware update, the second one is auxiliary QSPI area which is rarely updated and special update menu appears when the firmware needs new QSPI contents.



No action related to QSPI contents is needed until firmware requests QSPI update by showing [DMCP System menu](#) (or "[QSPI Load](#)" menu for firmware versions before 3.7).

Note that since version 3.7 the calculator operating system (called DMCP) is separated from the DM42 program. Thus, both DMCP and DM42 program could be loaded separately. For more details see [Changes since v3.7](#) and [Quick DMCP and PGM Update Guide](#) for separate DMCP and PGM update procedure.

The preferred firmware update method is by copying firmware file to [calculator FAT disk](#). This update method is available since DMCP version 3.5. See [Quick Update Guide](#) for update procedure.

Firmware update from FAT disk is implemented in main firmware, so it could be unavailable if the main firmware is corrupted. Then other method of update based on internal CPU flashing routine should be used. This method requires the calc to be switched in so called 'Bootloader mode'. Once activated, the internal bootloader exposes standard DFU interface and can be programmed by any DFU programming software with limitation that firmware is plain binary file not file in general .dfu format, so the programming software has to support it. Following chapters cover use of two programs able to use this DFU interface: GUI based [dm\\_tool](#) and command line utility [dfu-util](#).

Availability of the particular update method on mainstream operating systems outlines following table:

	FAT disk <sup>[1]</sup>	dm_tool	dfu-util <sup>[2]</sup>
Windows	X	X	X
Linux i686	X	X	X
Linux x86_64	X	X	X
macOS	X		X

[1] FAT disk update is available since DMCP version 3.5, you have to use other firmware update method if calculator contains earlier firmware version

[2] macOS users can get dfu-util via Homebrew

## 6.1. Changes since v3.7

Since version 3.7 the firmware for the calculator contains only operating system (called DMCP). DM42 program could be loaded separately as described in section "[Program update](#)".

Instructions for quick update of both DMCP firmware and program load are in "[Quick Update Guide](#)".

There is new DMCP User Manual future plan which should contain information about SDK and program development for DMCP platform. Before the manual becomes available here are some useful links related to DMCP development:

- Source code for DM42PGM program: <https://github.com/swissmicros/DM42PGM>  
Follow instructions in README files for program building
- Source code for base DMCP\_SDK with simple "Hello World" program: [https://github.com/swissmicros/DMCP\\_SDK](https://github.com/swissmicros/DMCP_SDK)  
Follow instructions in README files for program building
- More enhanced SDK demo: <https://github.com/swissmicros/SDKdemo>.  
It is simple RPN style calculator with
  - a. Power management
  - b. LCD printing
  - c. Keyboard handling
  - d. Use of Intel® Decimal Floating-Point Math Library (which leads to project with data in QSPI flash)
  - e. Menu system

And as usually, follow instructions in README files for program building.



Developing programs for embedded systems requires some level of expertise and SwissMicros doesn't have enough resources to make individual support for program building and SDK use.

## 6.2. Quick Update Guide (FAT disk update)

Here we will update DMCP system and DM42 program at once using combined flashing file.

### Prerequisites

`DMCP_flash_x.x_DM42-y.y.bin` - Complete DM42 firmware file e.g. `DMCP_flash_3.10_DM42-3.10.bin`

### Steps

1. Activate USB disk from `SETUP` → `File` → `Activate USB Disk` or alternatively from `DMCP System menu`.
2. Connect USB cable from DM42 to PC/Mac computer.
3. Copy the `DMCP_flash_x.x_DM42-y.y.bin` file from the PC/Mac computer to root folder of calculator disk.
4. Eject (safely remove) the calculator disk from PC/Mac computer. **Please, be patient this can take some time. Don't unplug USB cable until safely ejected from OS.**
5. Calculator detects presence of new firmware file and asks for update. You can confirm it immediately or press `[EXIT]` key and activate flashing process later using `Flash firmware from FAT` either from DM42 program `SETUP` → `System` or directly from `DMCP System menu Enter System Menu`
6. Once finished the calculator resets and should restart to updated DM42.

## 6.3. DMCP and PGM Update Guide



Since version 3.7

Here we will update DMCP system and DM42 program separately, therefore we need two files for that:

### Prerequisites

`DMCP_flash_x.x.bin` - DMCP system file, e.g. `DMCP_flash_3.10.bin`

`DM42-x.x.pgm` - DM42 program file, e.g. `DM42-3.10.pgm`

### Steps

1. Activate USB disk from DM42 program `SETUP` → `File` → `Activate USB Disk` or directly from `DMCP System menu`.
2. Connect USB cable from DM42 to PC/Mac computer.
3. Copy both `DMCP_flash_x.x.bin` and `DM42-x.x.pgm` files from the PC/Mac computer to root folder of calculator disk.
4. Eject (safely remove) the calculator disk from PC/Mac computer. **Please, be patient this can take some time. Don't unplug USB cable until safely ejected from OS.**
5. Calculator detects presence of new firmware file and asks for update. You can confirm it immediately or press `EXIT` key and activate flashing process later using "Flash firmware from FAT" either from DM42 program `SETUP` → `System` or directly from `DMCP System menu Enter`



## System Menu

6. Once finished the calculator resets and displays the [DMCP System menu](#).
7. Choose "Load Program" and select appropriate `DM42-x.x.pgm` file, loading process should start
8. Once loaded the system should (after key press) restart to DM42 program.

## 6.4. Program Loading/Update



Since version 3.7

Use this if you want to switch between programs or load new program to already loaded DMCP system.

DMCP system can have one loaded program and only loaded program can be started. Programs have `.pgm` extension and are expected to be stored in root folder of calculator disk.

### Prerequisites

Program file with `.pgm` extension, e.g. `DM42-3.10.pgm`, `SDKdemo-1.0.pgm`, etc.

### Steps

1. Activate USB disk from DM42 program `SETUP` → `File` → `Activate USB Disk` or directly from [DMCP System menu](#).
2. Connect USB cable from DM42 to PC/Mac computer.
3. Copy the program file to root folder of calculator disk.
4. Eject (safely remove) the calculator disk from PC/Mac computer. **Please, be patient this can take some time. Don't unplug USB cable until safely ejected from OS.**
5. Issue "Load Program" from [DMCP System menu](#). This menu can be reached from DM42 program at `SETUP` → `System` → `Enter System Menu` → `Reset to DMCP` menu.
6. Program list from root folder of FAT disk is displayed. Choose required program, press `ENTER`. After confirmation question the loading process should start.
7. Once loaded the system should (after key press) restart to loaded program.

If anything goes wrong, like the current DMCP system is older than program requires, the restart ends in Program Info screen which should show reason why program cannot start.

## 6.5. DMCP Update Guide

Here we will update DMCP system only. Note that this will end just in [DMCP menu](#) and you will need to [load some program](#) to get some *real* functionality.

### Prerequisites

`DMCP_flash_x.x.bin` - DMCP system file, e.g. `DMCP_flash_3.10.bin`

### Steps

1. Activate USB disk from DM42 program **SETUP** → **File** → **Activate USB Disk** or directly from **DMCP System menu**.
2. Connect USB cable from DM42 to PC/Mac computer.
3. Copy the **DMCP\_flash\_x.x.bin** file from the PC/Mac computer to root folder of calculator disk.
4. Eject (safely remove) the calculator disk from PC/Mac computer. **Please, be patient this can take some time. Don't unplug USB cable until safely ejected from OS.**
5. Calculator detects presence of new firmware file and asks for update. You can confirm it immediately or press **EXIT** key and activate flashing process later using **Flash firmware from FAT** either from DM42 program **SETUP** → **System** or directly from **DMCP System menu Enter System Menu**
6. Once finished the calculator resets and should restart to **DMCP menu**.

## 6.6. Bootloader mode activation

Bootloader mode can be activated from main Setup menu: **SETUP** → **System** → **Bootloader** or by using **RESET** and **PGM** button.

The sequence of entering bootloader mode using **RESET** and **PGM** button is:

- Press and hold **PGM** button
- Press and release the **RESET** button
- Release the **PGM** button

Older models have both buttons accessible through the holes in the calculator backplate. Newer models have one hole in the backplate for **RESET** button only, therefore the backplate should be removed first, then use the **RESET** and **PGM** buttons directly on PCB.

## 6.7. FW Update Using dm\_tool



The latest version of **dm\_tool** can be downloaded from the [Tools web page](#).

### 6.7.1. Prerequisites for Windows

You have to install **libusb** driver as described here: [http://technical.swissmicros.com/doc/libusb\\_install/libusb\\_install.html](http://technical.swissmicros.com/doc/libusb_install/libusb_install.html).

### 6.7.2. Prerequisites for Linux

#### USB device access rights

This configuration is optional.

You can allow access to the DFU device for users in **plugdev** group by running as root:

```
cd /etc/udev/rules.d/
cat << OI > 49-stm32-dfuse.rules
# This is udev rules file (place in /etc/udev/rules.d)
# Makes STM32 DfuSe device accessible to the "plugdev" group

ACTION=="add", SUBSYSTEM=="usb", ATTRS{idVendor}=="0483", ATTRS{idProduct}=="df11",
MODE="664", GROUP="plugdev"
OI
udevadm control --reload-rules
```

Then add users to `plugdev` group.

### 6.7.3. Launching `dm_tool`

#### Switch the calculator to bootloader mode

From menu or by RESET+PGM buttons (see [Bootloader mode activation](#)).

#### Connect the calculator to the PC

Be sure the libusb driver is installed if used in Windows ([http://technical.swissmicros.com/doc/libusb\\_install/libusb\\_install.html](http://technical.swissmicros.com/doc/libusb_install/libusb_install.html)).

#### Launch `dm_tool`

It can be launched by clicking on the exe file or from command line with firmware filename as argument.

If everything works well and the calculator was connected before launching `dm_tool`, then the message on the right side of [Program] button should show device number. If it shows "No DFU capable devices found (Click to refresh)" try to click at the message and it should display the ID of connected device after refresh and

```
Memory layout:
0x80000000-0x80ffffff: size 1024kB = 512*2kB pages
```

in the text area.

If the message "No DFU capable devices found" still remains there something is wrong with libusb driver installation or connection to the calculator or the calculator isn't in bootloader mode.

Finally press the [Program] button to flash new firmware.

## 6.8. FW Update Using `dfu-util`



macOS users can get `dfu-util` via Homebrew



Linux users (and possibly macOS users too) can avoid `sudo` use by setting appropriate user rights for DFU interface, see [user rights configuration for Linux](#).

Note that `dfu-util` is command line utility and you have to be able to launch terminal application and launch commands from console. If you are new to this, here are some tutorials:

- macOS: <https://blog.teamtreehouse.com/introduction-to-the-mac-os-x-command-line>
- Linux: <https://www.digitalocean.com/community/tutorials/an-introduction-to-the-linux-terminal>
- Windows: <https://www.bleepingcomputer.com/tutorials/windows-command-prompt-introduction/>

Now you can proceed with the following steps:

### Switch the calculator to bootloader mode

From menu or by RESET+PGM buttons (see [Bootloader mode activation](#)).

### Connect the calculator to the PC

You can list information about connected DFU device using console command `sudo dfu-util -l`

Sample output of this command (from macOS)

```
$ sudo dfu-util -l
Password:
dfu-util 0.9

Copyright 2005-2009 Weston Schmidt, Harald Welte and OpenMoko Inc.
Copyright 2010-2016 Tormod Volden and Stefan Schmidt
This program is Free Software and has ABSOLUTELY NO WARRANTY
Please report bugs to http://sourceforge.net/p/dfu-util/tickets/

Deducing device DFU version from functional descriptor length
Found Runtime: [05ac:828b] ver=0149, devnum=6, cfg=1, intf=3, path="29-1.8.1.3",
alt=0, name="UNKNOWN", serial="UNKNOWN"
Found DFU: [0483:df11] ver=2200, devnum=14, cfg=1, intf=0, path="20-4", alt=2,
name="@OTP Memory /0x1FFF7000/01*0001Ke", serial="207B35994E34"
Found DFU: [0483:df11] ver=2200, devnum=14, cfg=1, intf=0, path="20-4", alt=1,
name="@Option Bytes /0x1FFF7800/01*040 e/0x1FFFF800/01*040 e",
serial="207B35994E34"
Found DFU: [0483:df11] ver=2200, devnum=14, cfg=1, intf=0, path="20-4", alt=0,
name="@Internal Flash /0x08000000/512*0002Kg", serial="207B35994E34"
```

Where lines `Found DFU: [0483:df11]` indicate that calculator is correctly connected to PC and switched into bootloader mode.

### Prepare firmware file

Download the latest firmware file from [https://technical.swissmicros.com/dm42\\_user\\_manual/firmware/](https://technical.swissmicros.com/dm42_user_manual/firmware/) and ensure it is accessible from current directory in console e.g. by `ls -l DMCP_flash_3.10_DM42-3.10.bin`.

Or you can alternatively download firmware file directly to current directory using command (edit to use correct firmware file name according to before-mentioned page)

```
curl -O
https://technical.swissmicros.com/dm42_user_manual/firmware/DMCP_flash_3.10_DM42-
3.10.bin
```

### Launch dfu-util command

You can start flashing using command (edit to use correct firmware file name)

```
sudo dfu-util -D DMCP_flash_3.10_DM42-3.10.bin -d 0483:df11 -a "@Internal Flash
/0x08000000/512*0002Kg" -s 0x8000000
```

Please, be patient, it takes some time (few minutes).

Press RESET button after **dfu-util** finishes the flashing.

### Example output of **dfu-util**

```
$ dfu-util -D DMCP_flash_3.10_DM42-3.10.bin -d 0483:df11 -a "@Internal Flash
/0x08000000/512*0002Kg" -s 0x8000000
dfu-util 0.9

Copyright 2005-2009 Weston Schmidt, Harald Welte and OpenMoko Inc.
Copyright 2010-2016 Tormod Volden and Stefan Schmidt
This program is Free Software and has ABSOLUTELY NO WARRANTY
Please report bugs to http://sourceforge.net/p/dfu-util/tickets/

dfu-util: Invalid DFU suffix signature
dfu-util: A valid DFU suffix will be required in a future dfu-util release!!!
Opening DFU capable USB device...
ID 0483:df11
Run-time device DFU version 011a
Claiming USB DFU Interface...
Setting Alternate Setting # 0 ...
Determining device status: state = dfuERROR, status = 10
dfuERROR, clearing status
Determining device status: state = dfuIDLE, status = 0
dfuIDLE, continuing
DFU mode device DFU version 011a
Device returned transfer size 2048
DfuSe interface name: "Internal Flash "
Downloading to address = 0x08000000, size = 756288
Download [=====] 100% 756288 bytes
Download done.
File downloaded successfully

real 1m55.929s
user 0m0.044s
sys 0m0.048s
```

## 6.9. QSPI flashing



No action related to QSPI contents is needed until firmware requests QSPI update by showing [DMCP System menu](#) or "[QSPI Load](#)" menu for versions before 3.7.



Latest QSPI flash contents could be found at [https://technical.swissmicros.com/dm42/firmware/qspi\\_data/](https://technical.swissmicros.com/dm42/firmware/qspi_data/).

If you are looking for quick QSPI update instructions you most probably want to follow [Flashing QSPI from FAT disk instructions](#).

### 6.9.1. General information

While the contents of main flash changes with each firmware version. The QSPI contents is usually preserved and it will be explicitly noted in release notes when the QSPI contents changes.

Moreover, DMCP system makes checksum of expected QSPI contents after RESET before launching loaded program. If this check fails the DMCP system doesn't allow to start the program and writes information about missing QSPI data. Then you can use [DMCP System Menu](#) for both copying the QSPI data file to calculator as well to install this file.

**Obsolete:** Firmware versions from 2.10.13 to 3.7 contain built-in [QSPI loader](#) which is activated when QSPI data doesn't match.

The preferred option for QSPI update is to use "QSPI Load" menu to copy firmware to the calculator filesystem and [flash the QSPI contents from the file](#).

User can also switch the calculator [into bootloader mode](#) and then use `dfu-util` or `dm_tool` (obsolete) described below.

### 6.9.2. Flashing QSPI from FAT disk

Here we will update QSPI flash contents. We expect here calculator in [DMCP menu](#). Which is the place where calculator stops if you need to update QSPI flash contents.

#### Prerequisites

`DM42_qspi_x.x.bin` - QSPI data file, e.g. `DM42_qspi_3.x.bin`

#### Steps

1. We expect the calculator in [DMCP menu](#).
2. Activate USB disk from DMCP menu "Activate USB Disk"
3. Connect USB cable from DM42 to PC/Mac computer.
4. Copy the `DMCP_flash_x.x.bin` file from the PC/Mac computer to root folder of calculator disk.
5. Eject (safely remove) the calculator disk from PC/Mac computer. **Please, be patient this can take some time. Don't unplug USB cable until safely ejected from OS.**
6. Start QSPI update from DMCP menu "Load QSPI from FAT"

7. After successful updating the QSPI data file is removed from calculator disk

### 6.9.3. Flashing QSPI using `dm_tool` (obsolete)

Note that this method is obsolete and will be removed.

The `dm_tool` takes care about QSPI loader itself. Thus flashing new QSPI contents is as easy as flashing QSPI and ordinary flash contents in a row:

1. Flash `DM42_qspi_xxx.bin`
2. Flash `DM42_flash_xxx.bin`

The second step is important as the ordinary firmware is replaced by QSPI loader in first step.

See [Launching `dm\_tool`](#) for details about flashing using `dm_tool`.

### 6.9.4. Flashing QSPI using `dfu-util`

Download QSPI loader firmware `DMflash.bin`

Get `DMflash.bin` from the URL <http://technical.swissmicros.com/tools/DMflash-2.3.bin>.

Switch the calculator into bootloader mode

From menu or by RESET+PGM buttons (see [Bootloader mode activation](#)).

Flash QSPI bootloader

```
dfu-util -D DMflash.bin -a "@Internal Flash /0x08000000/512*0002Kg" -s 0x8000000
```

Press RESET button after `dfu-util` finishes the flashing.

Flash QSPI contents

```
dfu-util -D DM42_qspi_2.10.12.bin -a "@QSPI Flash /0x90000000/512*04Kg" -s 0x90000000
```

Press **F** (top right key) to switch the calculator back to bootloader mode.

Flash main firmware

```
dfu-util -D DM42_flash_2.10.12.bin -a "@Internal Flash /0x08000000/512*0002Kg" -s 0x8000000
```

Press RESET button after `dfu-util` finishes the flashing.

Note that this step is important as the ordinary firmware is replaced by QSPI loader earlier.


## 6.10. DMCP System Menu

This is main menu of DMCP system (i.e. operating system of the calculator).

This menu is automatically displayed if DMCP system doesn't contain any loaded program or starting of the program fails.

If there is valid program loaded into DMCP system it is automatically started after RESET and thus the DMCP menu isn't displayed.

To force DMCP menu start you can use **[F1]+[RESET]** (i.e. upper left key + RESET button through the hole in calculator backplate).

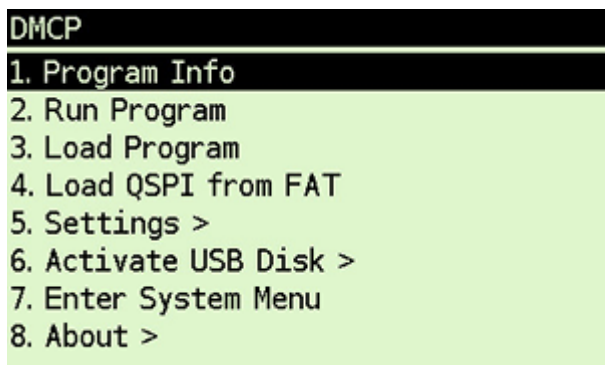

### 6.10.1. Program Info

Displays information about program loaded into DMCP system.

### 6.10.2. Run Program

Starts currently loaded program.

### 6.10.3. Load Program

Displays selection dialog to choose among programs stored in FAT root directory. Loads selected program to DMCP system.

### 6.10.4. Load QSPI from FAT

Starts flashing of the QSPI firmware. The firmware `DM42_qspi_xxx.bin` or `DMCP_qspi_xxx.bin` is expected to be stored in the FAT filesystem root directory.



Note that some programs don't use QSPI firmware area (e.g. the DM41X). If [Program Info](#) displays **QSPI NOT USED** then the contents of the QSPI firmware area is irrelevant for proper run of the program.

### 6.10.5. Settings >

[Time](#) and [Date](#) settings.



### 6.10.6. Activate USB Disk

Used to copy files from/to a host computer.

- Connect the calculator to a computer using a USB cable
- The DM42's flash disk should be visible on the computer
- Read/write files
- 'Eject device' on the host machine.
- Calculator should end USB disk mode automatically if correctly ejected by OS. You can end USB disk mode by pressing [ **EXIT** ] key on the calculator but be sure all data are flushed to disk first.



The last two points 'Eject device' and 'Press [ **EXIT** ] key on calculator' (if it doesn't end automatically) are important to avoid unsaved data and possible FAT disk corruption!

### 6.10.7. Enter System Menu

Jumps to the main [System menu](#)

### 6.10.8. About

Displays general information about DMCP system

## 6.11. QSPI Load menu



Obsolete, valid for versions before 3.7

This menu is displayed only when the calculator detects invalid contents of QSPI firmware area.

```
QSPI Load
1. Bootloader
2. Load QSPI from FAT
3. Activate USB Disk >
4. Format FAT Disk >
5. FAT Disk Media Test >
6. Show Disk Info >
```

### 6.11.1. Bootloader

Activates bootloader mode for firmware flashing.

Press the RESET button on the back of the calculator if you activate Bootloader mode accidentally.

### 6.11.2. Load QSPI from FAT

Starts flashing of the QSPI firmware. The firmware `DM42_qspi_xxx.bin` is expected to be stored in the FAT filesystem root directory.

### 6.11.3. Activate USB Disk >

Used to copy files from/to a host computer.

- Connect the calculator to a computer using a USB cable
- The DM42's flash disk should be visible on the computer
- Read/write files
- 'Eject device' on the host machine.
- Calculator should end USB disk mode automatically if correctly ejected by OS. You can end USB disk mode by pressing [ **EXIT** ] key on the calculator but be sure all data are flushed to disk first.



The last two points 'Eject device' and 'Press [ **EXIT** ] key on calculator' (if it doesn't end automatically) are important to avoid unsaved data and possible FAT disk corruption!

### 6.11.4. Format FAT Disk >

Format the internal FAT disk storage. All data is erased.

### 6.11.5. FAT Disk Media Test >

Checks whole flash disk FAT area for bad blocks. Disk is formatted starting from first good block after the check.



All data is erased from disk.

### 6.11.6. Show Disk Info >

Displays disk status and disk block info.